



SecuScan SecuScan

UNDER VEHICLE INSPECTION SYSTEM


- SYSTEM CREATES HIGHEST RESOLUTION IMAGES
- IMAGING IN COLOR
- AUTOMATIC FOREIGN OBJECT DETECTION (WITH ANPR OPTION)
- CONTINUOUS ZOOM-IN-TECHNOLOGY FOR INSPECTION OF FINEST DETAILS
- VIEW OF FULL UNDERCARRIAGE (INCL. DOOR SILLS / RUNNING BOARDS)

SECUSCAN AS MOBILE SYSTEM


The SecuScan under vehicle inspection system as mobile version is ideal for rentals, special events, pilots and demos. It is available with two different kinds of ramps: The SecuScan system with rubber pads is simple to install.

The solid rubber pads can be bolted to the road surface for semi-permanent installation. The SecuScan® system with aluminum ramps is even easier to install. The aluminum ramps are light and easy to carry for rapid deployment and ideal for special events:

- For flexible safety controls at changing inspection sites
- Fast assembly, fast disassembly and uncomplicated transport
- For all vehicle weight classes and track widths
- Available with light aluminum ramps or very robust rubber pads

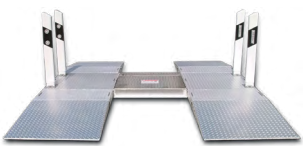

Mobile system with aluminum ramp

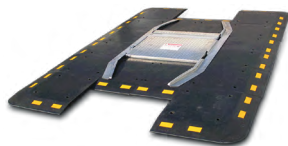

Rubber pad system



Mobile ScanStation



THE UNDER VEHICLE INSPECTION SYSTEM SECUSCAN® WITH ITS HIGHLY EFFICIENT SCANNING TECHNOLOGY SUPPORTS THE FAST AND UNCOMPLICATED DETECTION OF HAZARDOUS OBJECTS (EXPLOSIVES, DRUGS AND SMUGGLED GOODS ETC.) AND HIDDEN PERSONS WITHOUT DELAYING THE TRAFFIC FLOW AT CHECKPOINTS AND WITHOUT ENDANGERING THE SAFETY PERSONNEL BY WORKING OUTSIDE A PROTECTED CONTROL STATION.

THE SECUSCAN AS PERMANENT SYSTEM


The SecuScan as permanent system is available with guiding axels or heavy duty cover. With the high quality stainless steel heavy duty cover, the SecuScan under vehicle inspection system is ideal as permanent installation.

The heavy duty housing offers the best possible protection for the technology inside.

- Used for sophisticated safety inspections in connection with a comprehensive access control system
- Easy to install - mounts into the road surface with little constructional effort.



Tower ScanStation

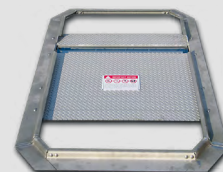

Permanent system with guiding axles



Permanent system with Heavy Duty Cover




SecuScan

SecuScan

AUTOMATIC FOREIGN OBJECT DETECTION


The SecuScan system is equipped with an Automatic Foreign Object Detection Algorithm which is supporting the detection of explosives, weapons, contrabands, etc.

The current scan is compared with a former scan and any differences found on the image will be highlighted to the operator in red.

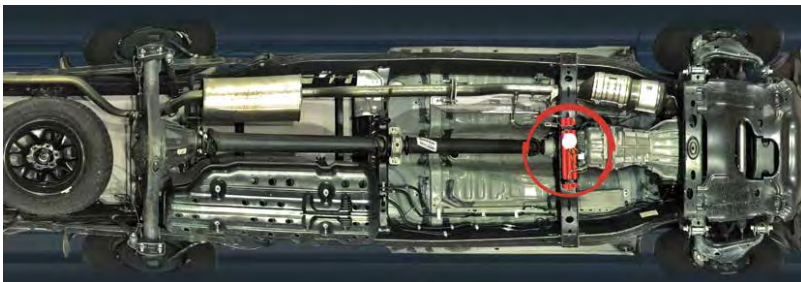

RANGE OF APPLICATIONS

The SecuScan systems act as security line at gates of industrial facilities, military camps, government buildings, border crossings, airports, seaports, stadiums, hotels, car parks, prisons etc.

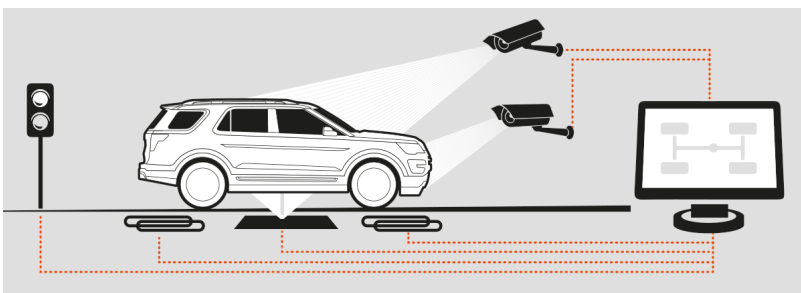

OPTIONS

• SECUSCAN AUTOMATIC NUMBER PLATE RECOGNITION SYSTEM (ANPR)

The SecuScan Automatic Number Plate Recognition (ANPR) decodes all kinds of vehicle plates with high speed and precision.

• SECUSCAN SCENE CAMERA

The integrated SecuScan Scene Camera creates e.g. a top-view-photo of the vehicle while driving through the inspection area. With this solution the operator is able to check the roof of trucks and other vehicles for contrabands and unauthorized persons, which are trying to hide.

• SECUSCAN DRIVER CAMERA

Secuscan provides different kinds of solutions to take an image of the driver.

HTDS

Parc d'Activités du Moulin de Massy - 3 rue du Saule Trapu
BP246 - 91882 Massy Cedex France

Tél : +33 (0) 1 64 86 28 28 - Fax : +33 (0) 1 69 07 69 54 - info@htds.fr - www.htds.fr

HTDS West Africa : +225 07 78 78 69 32

HTDS Libya : +44 75 25 06 49 72

HTDS Algeria : +213 232 384 01/02

HTDS Madagascar : +261 34 40 664 72

HTDS Egypt : +202 229 053 06

HTDS Morocco : +212 222 749 59

HTDS DRC : +243 990 086 063

HTDS Tunisia : +216 70 836 961

